


# LONDON BRICK PANEL INSTALLATION - PICTORIAL

Please refer to London Brick Panel Installation Guide for full details and how to attach to various wall types.



1 Measure, mark out and trim panels as required to align features

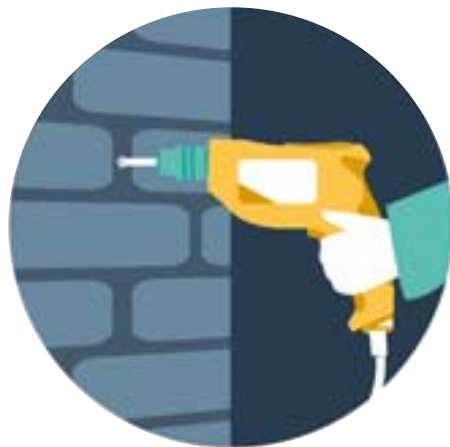

2 Raise or lower panels to align features, predrill and screw in place, packing out to suit



3 Roughly apply jointing compound to cover joints and fixing positions



4 Shape the jointing compound to suit as it begins to go firm



5 Introduce final texture to jointing compound with brush dipped in cleaner



6 Leave for 24 hours, sparingly apply colour solutions, rag off and blend with surrounding area

## EXAMPLE DETAILS



**Corners** - Raise /lower panels to align features. Mark position of corner, cut to form mitre. Fix panels leaving approx. 5mm gap, apply jointing compound and shape to suit



**Finishing exposed edges** - If panel end is exposed, use jointing compound to fill panel edge and shape to create brick end